



70L FRIDGE USER MANUAL

SCD-70L



Please read and understand this manual completely
before using this product.



SAFETY INFORMATION:

- Do not operate the fridge if it is visibly damaged.
- The fridge may only be repaired by qualified personnel. Inadequate repairs can lead to considerable hazards.
- Should your fridge need to be repaired, please contact customer service.
- Do not open the circuitry under any circumstances.
- The fridge is not suitable for transporting caustic materials or materials containing solvents.
- Food may only be stored in its original packaging or in suitable containers.
- Do not touch exposed cables with your bare hands.
- Before starting the fridge, ensure that the power supply line and the plug are dry.
- Do not place any electrical devices inside of the fridge.
- Set up the fridge in a dry location where it is protected against splashing water.
- Protect the fridge and the cable against rain and moisture.
- Do not place the fridge near naked flames or other heat sources (heaters, direct sunlight, gas ovens etc.)
- Never immerse the fridge in water.
- Do not fill the inner fridge with ice or fluid.
- Ensure that the fridge has sufficient ventilation at all times and that nothing could cover or hinder the ventilation slots.
- When using the fridge in a vehicle or boat ensure the circuit in use is fused and the wiring is adequate to support the current draw.
- Ensure the source of power to which you are connecting the fridge is the correct voltage.

ADJUSTING THE TEMPERATURE:

1. Turn the fridge on by connecting to power and switching to the 'on' setting.
2. The display will show the fridge's current internal temperature.
The fridge will start cooling to the last 'set' temperature.
3. To adjust the set temperature, press the 'set' button once or twice for the second fridge.
The screen will flash indicating which fridge has been selected.
4. This flashing number is the temperature the fridge is currently cooling down to.
5. Once selected the desired fridge, press the 'up' or 'down' buttons to change the temperature.
6. After 6 seconds it will revert to showing the current temperature in the refrigerator.



SWAPPING BETWEEN FAHRENHEIT (°F) & CELSIUS (°C):

1. To choose between Fahrenheit and Celsius, hold 'UVP' for 8 seconds then press 'UVP' once.
2. Stop pressing any button for 6 seconds to display the current temperature.

ECO AND MAX SETTINGS:

1. There are two modes of operations:
MAX = HIGH SPEED RUNNING
ECO = LOW SPEED RUNNING
2. To swap between these two setting press the 'snowflake' button
3. The fridge will display via a green indicator light which mode has been selected.

3-WAY SWITCH BATTERY VOLTAGE PROTECTION:

1. Press the 'UVP' (Under Voltage Protection) setting button to choose between the 3 voltage values 'L' 'M' 'H'
2. The green indicator light next to the settings will illuminate to the selected voltage.

ADJUSTING THE LOW VOLTAGE CUT-OFF:

Adventure Kings Fridges come with three different settings for voltage cut-offs:

	1	2	3
SWITCH OFF	10.7V	10.4V	11.6V
SWITCH ON	11.3V	11.6V	12.5V

BATTERY START PROTECTION:

1. The refrigerator is designed with a delay protection. When the fridge connects to a power supply there is a 1 minute delay to start up.
2. The control panel will show the battery used and voltage value respectively.

TECHNICAL INFORMATION

	SCD-70L
Gross Capacity	L: 34Litres / R: 36Litres
Dimensions (HWL)	538 x 496 x 875
Voltages	12 / 24 / 240
Average Power Consumption	≤ 52W
Temperature Range	10°C to -18°C
Weight	30kg
Refrigerant Fluid	R134a



24 MONTH LIMITED WARRANTY

PLEASE SEE WEBSITE FOR DETAILED INSTRUCTIONS ON HOW TO SET-UP & INSTALL YOUR 70L FRIDGE

WARRANTY PERIOD:

Full 24 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

CALL 1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au