

KINGS A D V E N T U R E



Dash Camera USER MANUAL

**PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY
BEFORE USE.**

Precautions

- Do not clean the camera with chemicals or solvents such as cleaning solutions or detergents.
- Do not expose the camera to magnetic fields, such as electrical motors or magnets.
- Do not expose the camera to high or low temperatures.

The normal operating temperature of the camera is 0°C to 40°C (32F to 104F).

High temperatures can shorten the lifespan of electronic devices and extremely high/low temperatures will shorten the battery life and/or degrade the plastic components

- Before you start recording with the camera, format the memory card in the settings menu or on a computer to avoid potential camera or card malfunctions. Memory cards should be formatted regularly to avoid potential camera or card malfunctions.
- If dust or dirt is on the camera or on its lens, use a soft, clean and dry cloth to wipe away debris gently.
- Take care and prevent water or sand particles from entering the housing. Water, sand particles and dust containing salt may cause damage.
- Do not use a cloth to wipe sand particles. Gently blow them away then wipe the camera with a soft cloth.

Overview

- | | | |
|--------------------|---------------------|----------------------|
| (1) Lens | (2) Speaker | (3) Indicator Lights |
| (4) Display Screen | (5) Micro HDMI Port | (6) Bracket Slot |
| (7) Micro USB Port | (8) Reset Button | (9) Microphone |
| (10) OK Button | (11) Mode Button | (12) Lock Button |
| (13) Power Button | (14) Down Button | (15) Menu Button |
| (16) Up Button | (17) TF Card Slot | |



Charging The Battery

When charging the camera, the top indicator light will emit a red light.

When charging is complete the light will turn off.

Installing And Removing The Micro SD Card

1. Make sure the camera is off when inserting or removing the micro SD card.
2. Insert the memory card in the correct direction.
Damaged or lost data may occur if installed incorrectly.
3. To remove the micro SD card, using your fingernail, press down on the card until it clicks.
It will now pop up out of the camera.

Turning The Camera ON/OFF

TURNING ON THE CAMERA

- Press and hold the Power button, after 3 seconds the Screen will display the start-up screen.

TURNING OFF THE CAMERA

- Press and hold the Power button for 3 Seconds until the Screen goes blank.

Capture/Playback Modes

VIDEO | PHOTO | PLAYBACK

To switch between modes, press the Mode button repeatedly until the desired mode. Once desired mode is selected, press the Menu button to open the settings menu.

VIDEO CAPTURE MODE:

Use this mode to capture video. Under the video mode, press the OK button to start recording, press the OK button again to end recording.

When recording, a short press on the Lock button will lock the current video, it will not be deleted when circle (loop) recording.

PHOTO CAPTURE MODE:

Use this mode to take photos. Press the OK button to take a photo.

PLAYBACK MODE:

Use this mode to view and manage photos and videos.

Press the OK button to view the recorded video/photo, use the Up and Down buttons to scroll through the recorded video/photo files.

When reviewing videos already taken, press the Up button to turn up the volume, or press the down button to turn down the volume.

Camera Settings

Depending on which media mode your camera is currently in will depend on which settings will be selected. e.g. if you are in the Video Mode and select settings, the video settings will pop up. Whereas if you were in the Photo Mode and selected settings the photo settings will appear.

- Press the Menu button once to access the current selected modes settings menu.
- Press the Menu button again to access the general settings menu.
- Once in the settings menu, use the Up and Down buttons to scroll through the various options.
- Press the OK button to confirm any settings options selected.
- Press the Menu button to exit.

Setting	Description	Options
Video Settings		
Resolution	Set the video resolution to your preferred output	1080FHD 1920x1080 / 720P 1280x720
Loop Recording	Sets the duration for each recording	
Exposure	Select preferred exposure	+2.0 / +5/3 / +4/3 / +1 / +2/3 / +1/3 / +0.0 / -1/3 / -2/3 / -1.0 / -4/3 / -5/3 / -2.0
Motion Detection	Video will automatically start recording when the camera detects movement in front of the lens	ON / OFF
Record Audio	Set to record audio	ON / OFF
Date Stamp	Set the date & time format	ON / OFF
G-sensor		OFF / High / Middle / Low
Photo Settings		
Resolution	Set the photo resolution to your preferred output	12M / 10M / 8M / 5M / 3M / 2MHD / 1.3M / VGA
Sequence	Turn the sequence function ON/OFF	ON / OFF
Quality	Choose the photo quality	Fine / Normal / Economy
White Balance	Set to adjust colour	Auto / Daylight / Cloudy / Tungsten / Fluorescent
Exposure	Select preferred exposure	+2.0 / +5/3 / +4/3 / +1 / +2/3 / +1/3 / +0.0 / -1/3 / -2/3 / -1.0 / -4/3 / -5/3 / -2.0
Date Stamp	Set the date & time format	ON / OFF
Playback Settings		
Delete	Delete the current file displayed or all files	
Protect	Lock/ Unlock the current file displayed or all files. (Locked files cannot be deleted unless unlocked)	
Camera Settings		
Parking Monitor	When the camera receives a jolt, the camera will start recording	Screen will show a P icon
Date & Time	Set the date & time format	Press the confirm button to enter the time settings
Auto Power Off	Turn ON/OFF automatic shut down	OFF / 1 min / 3 mins / 5 mins
Screen Saver	Turn On/OFF inactivity screen	OFF / 1 min / 3 mins / 5 mins
Sound	Turn the sound ON/OFF	ON / OFF
Language	Set the language	EN/SC/TC/FR/NL/ES/IT/PT/DE/PL/RU/JP/KR/TH
Frequency	Set the power frequency	50HZ / 60HZ
License Plate Stamp		OK - to enter license plate stamp setting
Format	Format the micro SD card	OK / Cancel (OK will format the protected files too)
Default Settings	Set the Camera back to the default settings	OK / Cancel
Version	The software version will be displayed on the screen	

Specifications

Screen	3.0 Inch
Lens	GC2023
View Angle	150°
Photo Format	.JPG
Video Format	.MOV
Video Code	H.264
Video Resolution	1080FHD 1920x1080 720P 1280x720
Photo Resolution	12M / 10M / 8M / 5M / 3M / 2MHD / 1.3M / VGA
HDMI	Supported
G Sensor	Supported
Lock File	Supported
Micro SD Card	Supports SD, SDHC & SDXC
USB Port	Mini 5 Pin USB 2.0
Sources	Car charger 5V / 1A

Transferring Files To A Computer

1. Turn the camera ON and connect to a PC or MAC's USB 2.0 port via the supplied micro USB cable. The camera screen will display a connecting screen.
2. Your captured videos and images will be accessible from your computer.

Note: Alternatively, you can remove the Micro SD Card from the camera and insert the card into a card reader.

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM UNDER THIS WARRANTY PLEASE CALL

1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au