



Double Shower Tent

USER MANUAL

PLEASE READ AND UNDERSTAND THIS MANUAL
COMPLETELY BEFORE USE.

Precautions

- Do not pitch the tent near a campfire or other flame source.
- Do not use matches, candles or other flame sources in or near the tent. (this includes cooking equipment, stoves and heating appliances).
- Always use extreme care when using electricity in and near tents. Only use 12V lighting.
- Do not pitch the tent in an area that could get flooded.
- Do not pitch the tent under trees with dead branches or trees that are known to drop branches.
- Do not pitch the tent near cliffs in case of falling debris or collapse.
- Do not leave the tent erected in strong winds. Collapse tent to the ground.

Overview

- ✓ Double Pop-up Shower Tent with Enclosed Spring Frame
- ✓ 2x Stabilising Poles
- ✓ 6x Pegs
- ✓ PE Floor Mat
- ✓ Carry Bag

Setting Up

1. Remove the tent from its carry bag and allow it to unfold.
2. Pull the tent walls so they are apart and all inside corners are open to a 90° angle.
3. Position the tent to your desired location and peg the base down using the webbing loops, making sure it is firm but not tight.
4. Attach the stabilising poles to both ends of the tent.

Note: Due to the pop-up frame design, the centre hook is designed to hold a shower hose only. Please ensure the water bladder is hung from a sturdy object (such as a stand or a tree) outside the tent.

Packing Down

1. Remove all contents and make sure the tent is clean and dry.
2. Remove pegs from the base of the tent.
3. Remove the two stabilising poles.
4. Push any corner in towards the opposite corner to condense the walls to double panels.
5. Fold the double panels together until you end up with a one panel flat unit.
6. With your hands about a quarter distance up each side of the now flat panel, lift the base section to hip height. Lift your hands gradually together so the tent bends to the ground about halfway. Once the top of the tent is touching the ground, move your hands together in front of you so that the sides of the tent are touching. The spring frame should be forming a loop shape.
7. While still holding the frame, cross your left hand under your right to gather on loop section inside the other.
8. With the tent on the ground, tidy up the size of the loop so the tent can fit into the bag, place tent in the carry bag.



12 MONTH LIMITED

WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear.
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au