




# Driving Lights **USER MANUAL**

AKLL-7LDL\_01 & AKLL-8.5LDL\_02 &  
AKLL-7ODL\_02 & AKLL-9ODL\_02

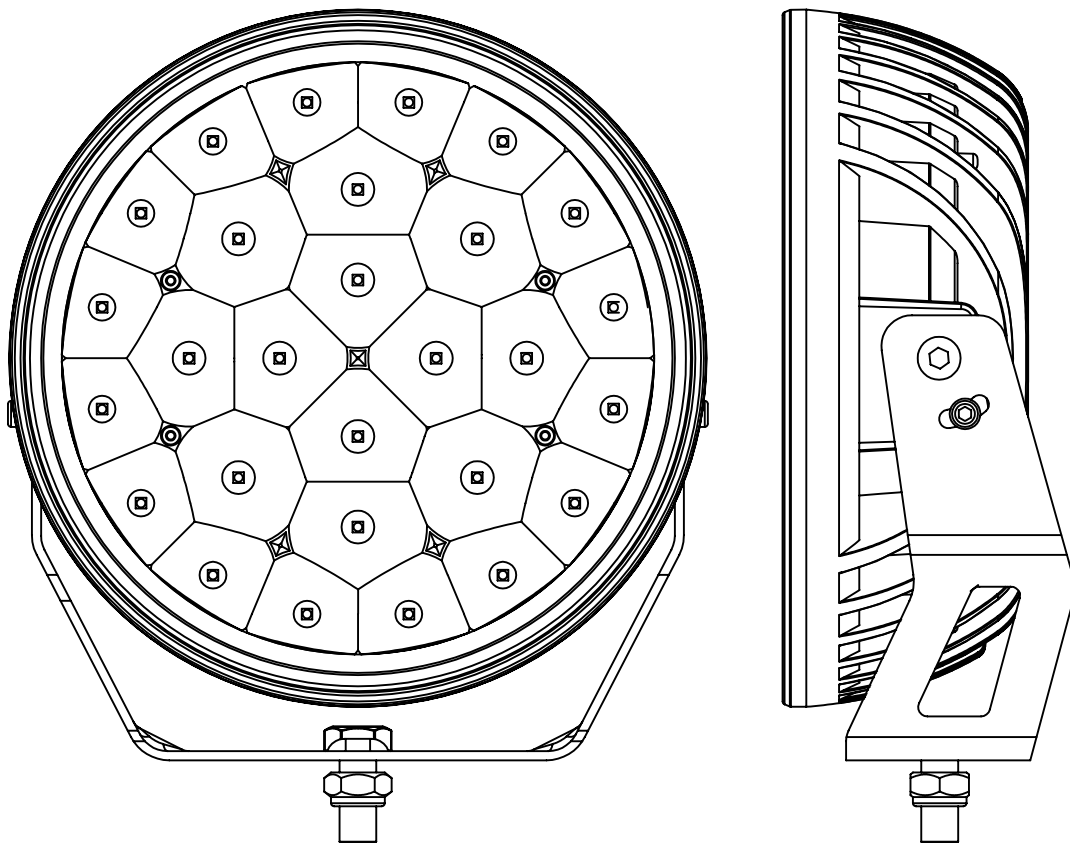

V1.1

**PLEASE READ AND UNDERSTAND THIS MANUAL  
COMPLETELY BEFORE USING THIS PRODUCT.**

# CONTENTS

1. SAFETY INFORMATION.....	3
2. INSTALLATION INSTRUCTIONS.....	4
3. AIMING THE DRIVING LIGHTS.....	5
4. WARRANTY CARD.....	6

# 1. SAFETY INFORMATION

## GENERAL CARE TIPS:

- Use warm soapy water to wash your lights, gently rinse the lights with plain water after washing. Never use solvent-based cleaners as you may damage the lens and/or wiring.
- Never use a high pressure washer near the spotlight body. Observe a minimum distance of 300mm (12in) when using a high pressure washer.
- Regularly check all fasteners to ensure they are secured and properly fixed.

## WARNINGS:

- Warning! Do not install and/or operate this product until you have read and understood the information in this user manual.
- Warning! Do not look at or stare into the light source when the light is switched on. Looking or staring at the light while it is on may result in serious eye injury or blindness.
- Warning! Light systems and outer housing get hot during operation. Disconnect any power sources from the light system and allow the system to cool down before handling any components.
- Warning! A light system is a high current system. Always disconnect any power source during wiring and installation. Otherwise, electric shock or injury may occur.
- Caution! When drilling into any vehicle surface, make sure the surface is free from any electrical wires, fuel lines, vehicle upholstery, etc. that could be damaged.


## SAFETY INFORMATION:

- Keep this user manual for future reference.
- Never remove warning or information labels from the product.
- Never block air breather bolt (i.e. vented screw).
- Make sure the wiring kit is never crimped, nicked, or damaged in any way.
- Always use a suitable fuse on the positive terminal, as close as possible to the battery.
- Always disconnect the negative battery terminal first.
- Do not install the product anywhere that may block, impair, or blind a driver's vision.
- For outdoor use only.
- Ensure no flammable materials are close to the unit before testing and operation.
- In the event of a malfunction or problem with any part of the product, stop using the product immediately, and return it to the place of purchase. Never try to repair the product by yourself.
- After installation, test the product to ensure it is operating correctly.
- Install the product so that it fully complies with local vehicle registration body requirements or National Vehicle Standards Bulletins as applicable (for road registerable vehicles).
- The user is responsible for correctly installing, positioning, and using the product. The manufacturer and retailer will not accept any liability for damages or penalties resulting from incorrect installation, positioning, or use of this product.
- The manufacturer and retailer will not accept any liability for damages or penalties resulting from non-compliance with information provided in this user manual.
- The manufacturer and retailer will not accept any liability for damages or penalties resulting from modification of the product.

## 2. INSTALLATION INSTRUCTIONS


### CONNECTING:

The Adventure Kings Driving Light range features a Deutsch style socket. When connecting a Deutsch plug, wait for an audible click and then gently pull back on the plug to confirm that it is locked in.

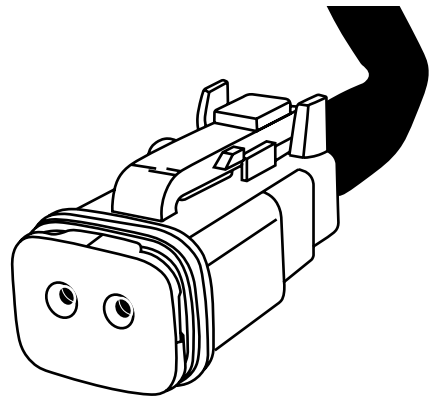


### MOUNTING:

Adventure Kings Driving Lights use a tough 3-bolt mounting system, we recommend using all 3 bolts to ensure your Driving Light is secure.

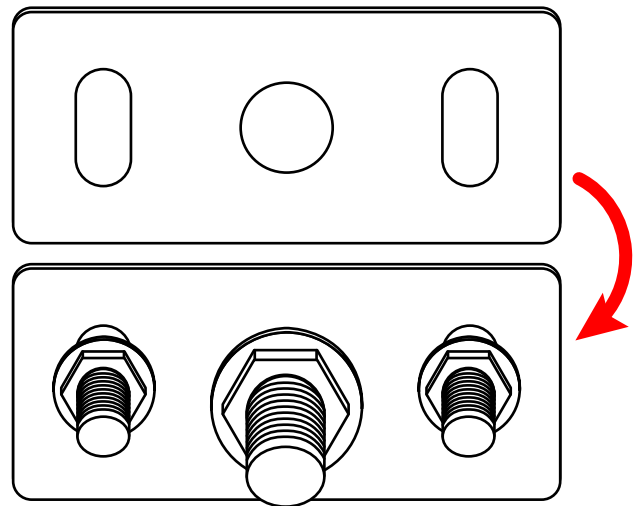

Attach your driving light onto the surface of choice and secure it in place with the bolts then followed by the washer, split washer and nut.

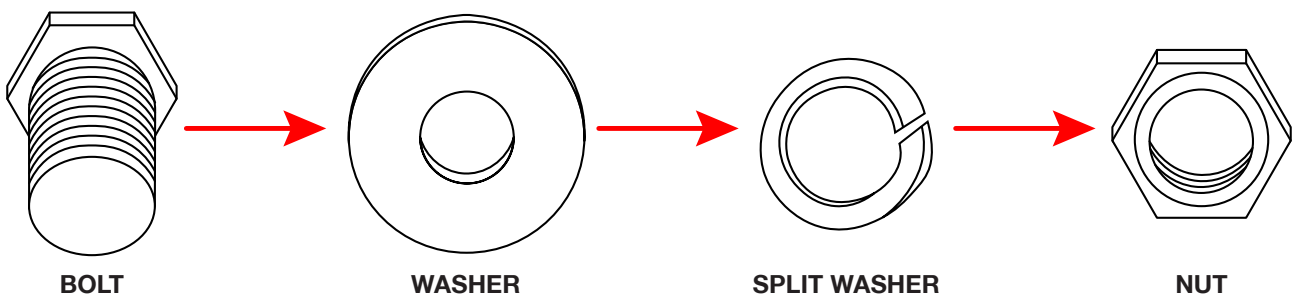

# 3. AIMING THE DRIVING LIGHTS

Aiming your Driving Lights will ensure you are getting the best possible performance.

## YOU WILL NEED:

- A tape measure.
- A marker, chalk, or tape (to provide reference lines).
- A vertical wall with a level surface in-front of it with at least 30 meters of room.

## METHOD:

### STEP 1

Measure the distance from the centre of your Driving Lights to the ground.

### STEP 2

Next, measure the distance between the centres of the two Driving Lights.

### STEP 3

Replicate these measurements on the flat 90° wall.

### STEP 4

Face your vehicle perpendicular to the wall, so the centre of your vehicle aligns with the centre of your markings. The vehicle should be between 25 and 30 meters from the wall.

### STEP 5

Turn your Driving Lights on and take note of where the light is most intense on the wall.


### STEP 6

Your Driving Lights are now set-up for your vehicle; tighten the bolts and you're good to go.

### STEP 7

Measure the distance from the centre of your Driving Lights to the ground.

**NOTE: Lifting, increased load and tyre pressure changes can affect the aim of the Driving Lights.**

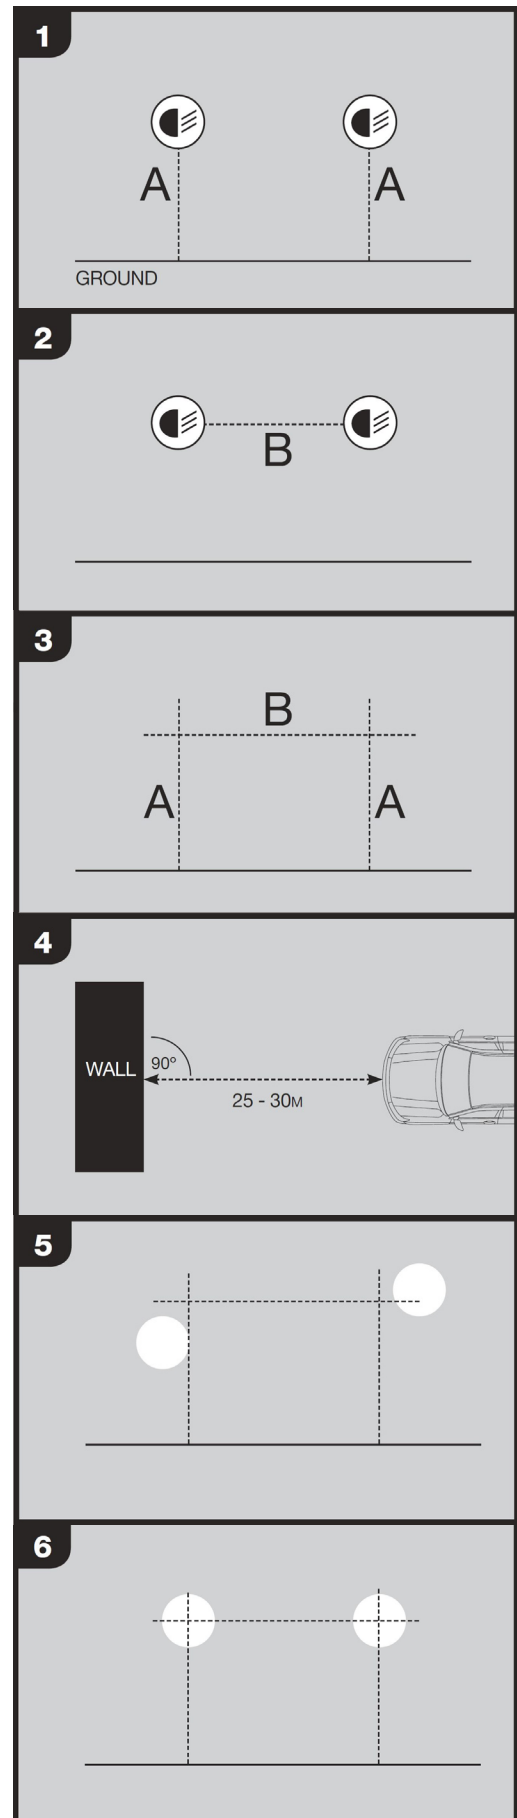

# 24 MONTH LIMITED WARRANTY

## WARRANTY PERIOD:

Full 24 month warranty from date of purchase against all manufacturing defects.

---

## WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

---

## THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
  - b. Faulty installation or modification made during installation
  - c. The cost of removing and reinstalling the product
  - d. Travel and /or other expenses due to customer's remote location
  - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
  - f. Any loss directly or indirectly associated with the product failing to operate.
  - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
- 

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

# 1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD  
2 Stanley St Silverwater NSW, 2128  
PHONE: 1800 88 39 64  
[www.4wdsupacentre.com.au](http://www.4wdsupacentre.com.au)