



GAZEBO'S USER MANUAL

AKGA-GAZ3x3_02 & AKGA-GAZ6x3_02



V1.1

**PLEASE READ AND UNDERSTAND THIS MANUAL
COMPLETELY BEFORE USING THIS PRODUCT.**

SETUP INSTRUCTIONS

STEP 1: CHOOSING AN APPROPRIATE SITE

Pick an area with level ground & sheltered from wind. Remove any debris that could compromise the stability of the ground.

STEP 2: UNPACKING THE GAZEBO

Unpack your Gazebo & place the Gazebo's frame up-right. With the help of another person, grab opposing corners and gradually move away from each other. Ensure that frame is opening evenly and is not snagging at any point; move between the legs making sure the frame is opening in a square. As shown in **Figure 1**, open the frame until it is just short of its maximum size. This makes installing the cover significantly easier

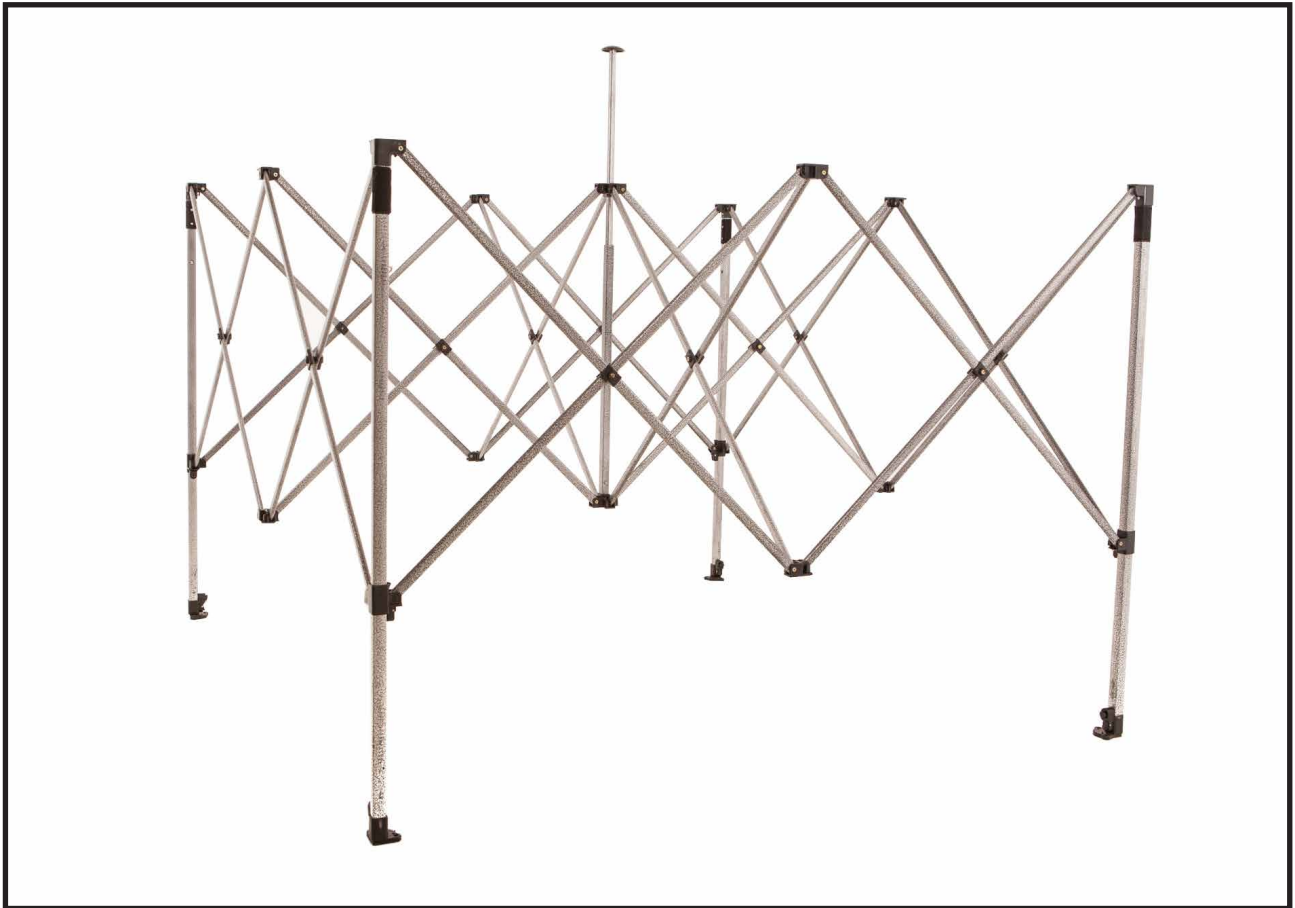


FIGURE 1

STEP 3: INSTALLING THE GAZEBO'S CANOPY

With the Gazebo's frame almost fully extended out; take the Gazebo's cover and place it over the frame, as shown in **Figure 2**. Attach the Velcro points found in the corners of the cover and the frame together, shown in **Figure 3**



FIGURE 2



FIGURE 3

STEP 4: LOCKING THE GAZEBO'S STRUCTURE AND SECURING THE COVER

With the cover successfully installed to the Gazebo's frame, finish extending the frame out horizontally. Then, grasp the sliding bracket (**Figure 4**) and slide the bracket upwards so that it locks into position in each of the four corners.

After each corner of the Gazebo is locked into place, secure the four webbing straps (**Figure 5**) to the frame. The Gazebo's cover should fit firmly over the frame ensuring water will run evenly off the Gazebo.



FIGURE 4



FIGURE 5

STEP 5: ADJUSTING THE GAZEBO'S HEIGHT

The Gazebo has three different height settings to choose from. To adjust the Gazebo's height, press in the leg lock and slide the leg to the desired height. Make sure that all the legs are adjusted to the same height and that all the legs are locked into position.



FIGURE 6

STEP 6: ADJUSTING THE GAZEBO'S HEIGHT

With the Gazebo fully assembled, it's now important to secure it to the ground. As shown in **Figure 7** and **8**, peg the frame down with the provided pegs and/or Guy ropes. Check that all the pegs are firm and secure in the ground.



FIGURE 7



FIGURE 8

NOTE: It is highly recommended that extra measures are to be used to secure your Adventure Kings Gazebo to the ground in windy conditions. In extreme circumstances the Gazebo should be packed away to prevent damage. Outdoor Supacentre PTY LTD trading as '4WD Supacentre' will not be held liable for Gazebo's that are damaged due to adverse weather.

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au