



INSTRUCTIONS

Adventure Kings Food Vacuum Sealer

MODEL NO. VS400

PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY BEFORE OPERATING

Contents

1. Technical Data	2
2. Safeguards & Tips	3
3. Structure & Functions	3
4. Operating Instructions	4
5. Seal Vacuum Bags	4
6. Helpful Hints	5
7. Troubleshooting	5
8. Care and Cleaning	6
9. The Complete System's Accessories	X
10. Storage Guide	6

Technical Data

Rated Voltage	220V - 240V AC
Rated Frequency	50~60Hz
Rated Power	110W
Sealing Time	6~~10 Seconds
VAC/Sealing Time	10~~20 Seconds
Vacuum Oiwer	-0.8 bar (approx.)
Dimensions	Length: 370mm Width: 132mm Height: 65mm
Weight	NW: 0.95KG GW: 1.60KG

Thank you for purchasing an Adventure Kings Food Vacuum Sealer

Safeguards & Tips

1. Check if the voltage indicated on the appliance is corresponding to the local mains voltage before you connect the appliance.
2. Do not operate the appliance with a damaged power cord or plug.
Do not operate the appliance if it malfunctions or is in any way damaged.
3. To disconnect, unplug the power cord from the electrical outlet. Do not disconnect by pulling on the cord.
4. Do not use an extension cord with the appliance.
5. When it is not in use or when it is being cleaned unplug cord from the power outlet.
6. Do not use the appliance on wet or hot surfaces, or near a heatsource.
7. Do not immerse any part of the appliance, power cord or plug in water or other liquids.
8. Use only accessories or attachments recommended by the manufacturer.
9. Do not touch the element. It will become hot after use and injury may result.
10. Use appliance only for its intended use.
11. This vacuum sealer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the vacuum sealer.

Structure & Functions

1. **"Vac/Seal" button:**

Press this button to vacuum and seal bag.

(It is recommended to let the appliance cool down for 60 seconds after each use)

2. **"Seal" button (with LED):**

Press this button to seal bag.

(It is recommended to let the appliance cool down for 60 seconds after each use)

3. **"Stop" button:**

Press this button to stop the appliance working at any time.

Operating Instructions

A. Locking Mechanism:

Press both sides of cover until it clicks to lock the bag into place.

B. Vacuum Plate:

Place the open end of bag into the groove.

C. Foam Gasket:

Prevents air from leaking.

D. Rubber Lip:

Creates a seal.

E. Sealing Strip:

3mm wide sealing strip.

Caution: Will get hot during use.

F. Vacuum Nozzle:

The bag must be placed below this nozzle for vacuuming. Don't cover the nozzle.

G. Release Mechanism:

Press both buttons located on each side of the unit to release the fully sealed bag.

Vacuum & Seal Bags

1. Put the items that you want to preserve inside the bag.
2. Clean and straighten the open end of the bag.
Make sure that there is no wrinkle on the open end.
3. Make sure that both sides of the opening end are located within the groove (vacuum plate **B**), but below the vacuum nozzle to ensure no air leakage during vacuum process.
4. Close the cover and then press heavily on both sides of the cover until you hear a clicking sound.
5. Press the "Vac/Seal" button and then the bag will be automatically vacuumed and sealed.
6. Then press the release mechanism to release the fully sealed bag.

Seal Bags Only

1. Plug the appliance in.
2. Place either open end of the bag on the sealing strip (**E**), beneath the lower foam gasket.
(Note: Do not position the open end of the bag inside the vacuum plate.)
3. Close the cover. Press both sides of the cover usng two hands until a clicking sound is heard.
4. Press the 'Seal' button to start sealing. The sealing indicator light will be illuminated.
5. When the sealing indicator light turns off, sealing is completed. Press the release mechanism.
6. Open the cover and take out the bag.

Helpful Hints

- Do not over fill the bags: leave atleast 3 inches of bag material between contents and top of bag.
- Ensure that the open end of the bag is not wet. A wet bag may be difficult to be sealed tightly.
- Vacuum sealing is NOT a substitute for the heat process of canning. Perishables still need to be refrigerated or frozen.
- To prevent wrinkles in a seal when vacuum sealing bulky items, stretch bag flat while placing it onto the vacuum plate.
- Pre-freeze fruits and blanch vegetables before vacuum sealing for the best results.
- If you are unsure whether your bag was sealed properly, just reseal the bag.
- Always use bags and rolls designed for food vacuum sealers.

Troubleshooting

- **Nothing happens when I try to vacuum package:**
 1. Check the power cord to see if it is firmly plugged into electrical outlet.
 2. Examine power cord for any damage.
 3. Plug the power cord into another position of the electrical outlet to see if it works.
 4. Make sure the lid is closed and the latch is locked into position.
 5. Make sure bag is placed correctly inside vacuum plate.
 6. Wait 60 seconds to allow appliance to cool off and then try using it again.
- **Air was removed from the bag, but now air has re-entered:**
 1. Examine the seal of the bag. A wrinkle along the seal may cause air leakage and allow air to enter. Simply cut the bag and reseal
 2. Sometimes moisture or food material (such as juices, grease, crumbs, powders etc.) along seal prevents bag from sealing properly. Cut bag open, wipe top inside of bag and reseal.
- **Air is still in the bag:**
 1. Make sure the open end of the bag is placed entirely inside vacuum plate. If the edge of the bag is beyond vacuum plate, bag will not be sealed properly.
 2. To see if your bag has a leak, submerge it into water because water will apply pressure to it. If bubbles appear this indicates a leak. A new bag is required.
 3. If you are using a custom-sized bag, check the seal of the bag. A wrinkle along the seal may cause air leakage and allow air to re-enter, just cut bag and reseal.
 4. Do not attempt to make your own side seams for a bag. The bags are manufactured with special side seams, which are sealed all the way to the outer edge. Making your own side seams may cause air leakage and allow air to re-enter.
 5. If you are vacuum packaging sharp food items, bag may have been punctured, use a new bag if there is a hole.
 6. If you are still having trouble with air in your bag, fermentation, or the release of unpleasant smell from inside the foods may have occurred. When this happens, food may have begun to spoil and should be discarded.
- **The bag melts:**
 1. If your bag melts, the rubber lip may have become too hot, always wait atleast 60 seconds for the appliance to cool down before you vacuum package another item.

Care and Cleaning

Your Adventure Kings Food Vacuum Sealer is easy to clean, just follow the simple steps below:

1. Always unplug the appliance before cleaning.
2. Wipe the outside of the appliance with a damp cloth or sponge and mild soap if necessary.
3. To clean the inside of the appliance, wipe away any food or liquid with a paper towel.
4. Dry thoroughly before using again.

Bags And Rolls

The design of Bags and Rolls features special texture that enables the efficient and complete removal of air. The multi-ply structure makes them an especially effective barrier to oxygen and moisture, preventing freezer burn. Bags and Rolls come in a variety of sizes. Majority of bag and rolls sold by other brands will work with your Adventure Kings Food Vacuum Sealer.

Storage Guide

Keep the appliance in a flat and safe place, out of the reach of children.

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

CALL 1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au