

KINGS A D V E N T U R E



Camp Stove

USER MANUAL

**PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY
BEFORE OPERATING THE CAMP STOVE**

Safety Information:

- We only recommend the use of dry, seasoned timber as a fuel for the Camp Stove, other fuels, such as ignitable liquids should not be used.
- Only use the Camp Stove outdoors in well-ventilated areas.
- Before lighting the fire, ensure the Camp Stove is level, the legs are locked and the ground is solid and that there is no possibility for the Camp Stove to be knocked over.
- During operation, the Camp Stove will be extremely hot and poses a fire risk, remove any flammable items from its vicinity and always have a means of putting out the fire.
- Take care when lifting the Camp Stove, ensure that it is cool enough to touch and that you employ proper lifting techniques.
- The Camp Stove is not intended to be used by children. In addition to this, adults with reduced physical or mental capabilities, or those who are under the influence of drugs or alcohol should not operate the Camp Stove.

Unpacking & Assembly:

After unpacking the Camp Stove, flip the stove upside down and lock the three supporting legs in the upright position.

Then flip the stove upright onto its legs, open the door and pull out the chimneys five sections.

Connect the chimney sections together, ensuring they are firm & secure to prevent smoke from leaking out. After this is done, connect it onto the stove.

Finally, connect the ash collector to the front of the stove, just under the door

Using the Camp Stove:

Whilst cooking with the Camp Stove, ensure that the flue damper is in the fully open position (vertical). It is also recommended that the door is locked slightly open, this will allow air to flow to the fuel.

To reduce the temperature of the stove, simply close the door, this will dampen the fire.

To conserve fuel, 10 minutes after closing the door, turn the flue damper to 45°.

To put the fire out, 10 minutes after closing the door, turn the flue damper to 90°.

CAUTION: Take care when adjusting the flue damper & opening/closing the door, they will be hot and can burn you.

Maintenance:

It is recommended that you clean the Adventure Kings Camp Stove after every use. Additionally, a light coating of cooking oil, will help to prolong the life of the stove and provide additional corrosion resistance.

12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
-

TO MAKE A CLAIM UNDER THIS WARRANTY PLEASE CALL

1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au

