



4 Bar Camp Light Kit

USER MANUAL



**PLEASE READ AND UNDERSTAND THIS MANUAL
COMPLETELY BEFORE USING THE PRODUCT**



Warning & Safety information:

- Use caution when connecting cables to a power source as this may cause injury when not carried out correctly.
- Designed for use in sheltered areas, protected from adverse weather such as rain.
- Do not look directly at LED lights as it can cause eye damage.
- A maximum of 4x50cm LED bars can be used of one circuit. Any additional bars may cause overheating and damage to the items/circuits.

Troubleshooting:

1. Check all connections are secure.
Check power supply is plugged in and switched on. Some vehicle cigarette sockets can have loose-fitting connections. Try pushing the cigarette plug in further. If this still does not work you will need to use a different power source. You can connect directly to the battery using the supplied alligator clamps.
2. If it is still not working, try unplugging the On/Off switch and connecting the LED directly to the power source. If it now works you have located a problem in the On/Off switch.
3. If it is still not working contact 4WDSupacentre for assistance.





Installation

There are several ways the LED Bars can be installed:

1. Using the magnets at either end of each bar they can be connected to metal objects (not alloy). A small metal washer can be super glued onto your awning poles. Ensure it does not interfere with operation and installation of the awning.
2. A metal washer can be placed on top of the fabric and the LED can be magnetised through the fabric.
3. Using the Velcro ties the LED bars can be attached to any of the horizontal or vertical alloy poles. Ensure leads are neatly tucked away by running them behind any Velcro securing tabs.

Components:

- 4x 50cm LED Magnetic Bars
- 1 x 3m quick connect lead with cigarette lighter plug
- 1 x battery terminal clamp to cigarette adaptor
- 1x dimmer switch
- 3 x 1.5m extension lead
- 8 x velcro straps
- 1 x carry bag





12 MONTH LIMITED WARRANTY

WARRANTY PERIOD:

Full 12 month warranty from date of purchase against all manufacturing defects.

WHAT DOES THE WARRANTY COVER?

Under normal usage conditions, this warranty covers:

- a. Any defect in design or manufacture which results in the product failing to perform substantially as described in authorised advertising or literature.
- b. We will either repair or replace the product at our discretion providing that the fault is found to have been caused by a design or manufacturing defect and not misuse or tampering.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided to you as the consumer by this warranty are in addition to other rights and remedies available to you under the law.

THE WARRANTY DOES NOT COVER:

- a. Any damage resulting from improper use
 - b. Faulty installation or modification made during installation
 - c. The cost of removing and reinstalling the product
 - d. Travel and /or other expenses due to customer's remote location
 - e. Transport charges and damage in transit. It is your responsibility to deliver and pick up your product, including any costs associated with the postage of your repair or replacement product. If you do freight your product we recommend that you insure against loss or damage.
 - f. Any loss directly or indirectly associated with the product failing to operate.
 - g. Damage caused by mould, insects, animals, misuse, incorrect operation, adverse weather, accidents and fair wear and tear
-

TO MAKE A CLAIM, PLEASE ENSURE YOU RETAIN YOUR SALES RECEIPT OF PURCHASE

CALL 1800 88 39 64



OUTDOOR SUPACENTRE PTY LTD
2 Stanley St Silverwater NSW, 2128
PHONE: 1800 88 39 64
www.4wdsupacentre.com.au